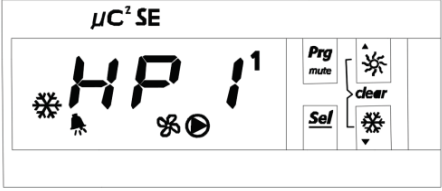
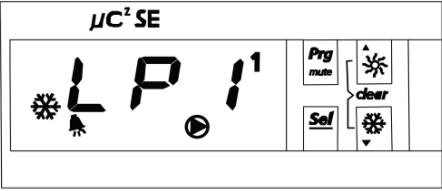

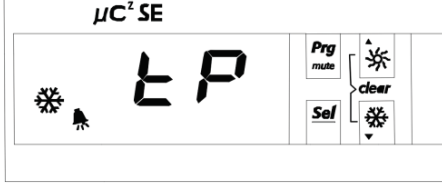


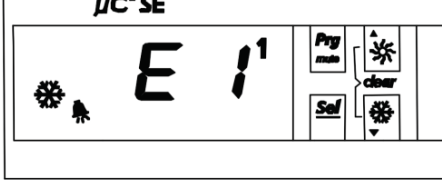


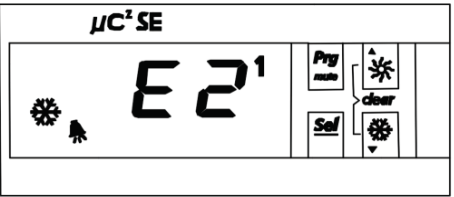
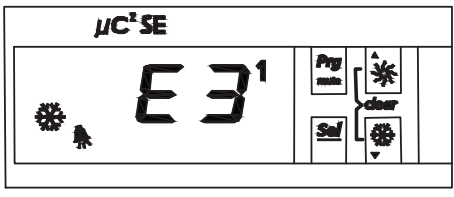
Chiller






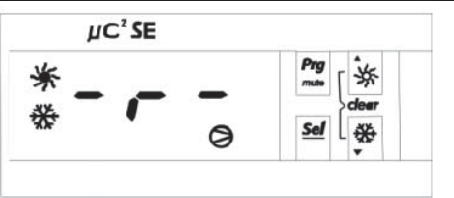
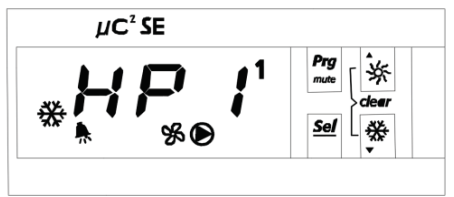
ACCH,ACHT

CODE ALARM

	<p>High pressure switch (HP1)</p>
	<p>Low Pressure switch (LP1)</p>
	<p>Flow switch (Fs)</p>
	<p>Over load Comp , Fan , Pump (F)</p>
	<p>Freeze temperature Protection (TH)</p>
	<p>Compressor Step (Comp1 , Comp2)</p>
	<p>Sensor temperature Outlet (Temp Out) (สาเหตุจากการเสียหายของเซ็นเซอร์)</p>

 <p>The display shows the brand name μC² SE at the top. Below it, the error code E2¹ is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>Sensor temperature Anti freeze (TH) (สาเหตุจากการเสียหายของเซ็นเซอร์)</p>
 <p>The display shows the brand name μC² SE at the top. Below it, the error code E3¹ is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>Sensor temperature Inter (Temp In) (สาเหตุจากการเสียหายของเซ็นเซอร์)</p>

Manual Setting

 <p>The display shows the brand name μC² SE at the top. Below it, the number 601 is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>Sensor temperature (Temp Outlet) กด * 1 ครั้งเลือก 01 จะแสดงอุณหภูมิขาน้ำออก</p>
 <p>The display shows the brand name μC² SE at the top. Below it, the number 602 is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>Sensor temperature Anti freeze (TH) กด * 1 ครั้งเลือก 02 จะแสดงอุณหภูมิขาน้ำแข็ง</p>
 <p>The display shows the brand name μC² SE at the top. Below it, the number 603 is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>Sensor temperature (Temp Inlet) กด * 1 ครั้งเลือก 03 จะแสดงอุณหภูมิขาน้ำเข้า</p>
 <p>The display shows the brand name μC² SE at the top. Below it, the number 7-7-7 is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>ในการตั้งค่าขาน้ำออก ที่ 7 องศา กด Sel ค้าง 3-5 วินาที แล้วกดเลือก 7-7-7 แล้วกด Sel แล้วเลือก 7-01 แล้วปรับค่าตามต้องการ</p>
 <p>The display shows the brand name μC² SE at the top. Below it, the error code HP¹ is displayed in large digits. To the left of the digits are two snowflake icons. To the right are control buttons: Prg mute, Sel, and a clear button with up and down arrows.</p>	<p>กรณีจะรีเซ็ต alarm กดปุ่ม * กับ [snowflake icon] พร้อมกันค้างไว้ 3-5 วินาที</p>